

SERVICE & PARTS TECHNICAL INFORMATION

79-H-1

NO.



Triumph

April, 1979

SUBJECT:

AIR CONDITIONING CONDENSATE DRAIN

MODELS:

TR7

It is possible that a condition could exist whereby condensation may drain into the footwells on either side of the air conditioning unit.

To rectify any complaints resulting from this condition a Drip Tray Drain Kit, part no. BLM 601038, must be fitted. A time of .60 hours is allowed for this operation.

A copy of the installation instructions enclosed with each kit is attached to this bulletin.

Attachment
P.W.B./H.C.T.

H
A
I
R
C
O
N
D

INSTALLATION INSTRUCTIONS OF TR7 DRIP TRAY KIT

PART NUMBER BLM 601038

1. Move back center console panel.
2. Fold carpets back on each side of center floor tunnel.
3. Measure 9" back from forward edge of tunnel insulation as per **Photo # 1** right and left side.
4. On highest point of radius, drill a 7/8" hole using hole saw. **Photo # 2**.
5. Temporarily install screws to hold drip tray in position and seal tubes with Strip Calk (Dum Dum) or silicone sealer. **Photo # 3**.
6. Position carpet and cut as per **Photo # 4**.
7. Install carpet. **Photo # 5**.
8. Remove screws from drip trays and install center console. **Photo # 6**. Attach side screw thru console and drip trays.

TIME ALLOWANCE .60 HOURS

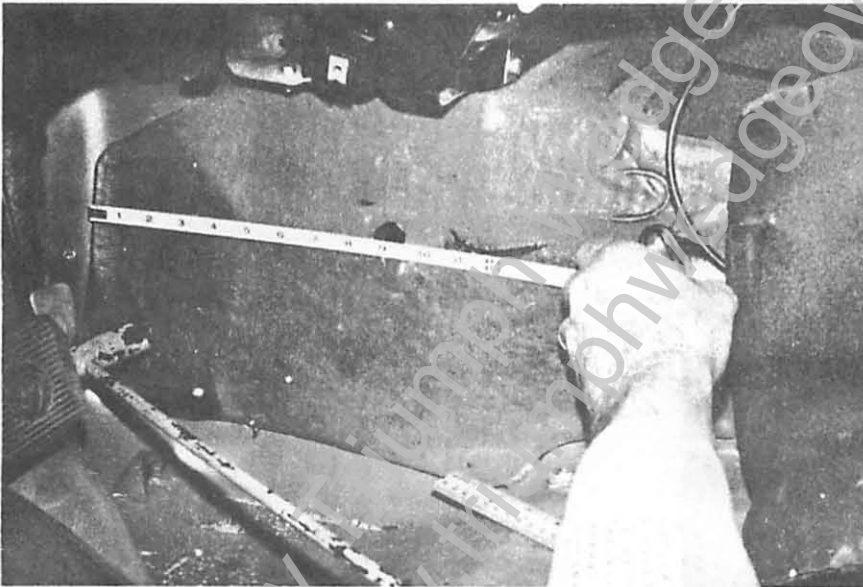


PHOTO # 1

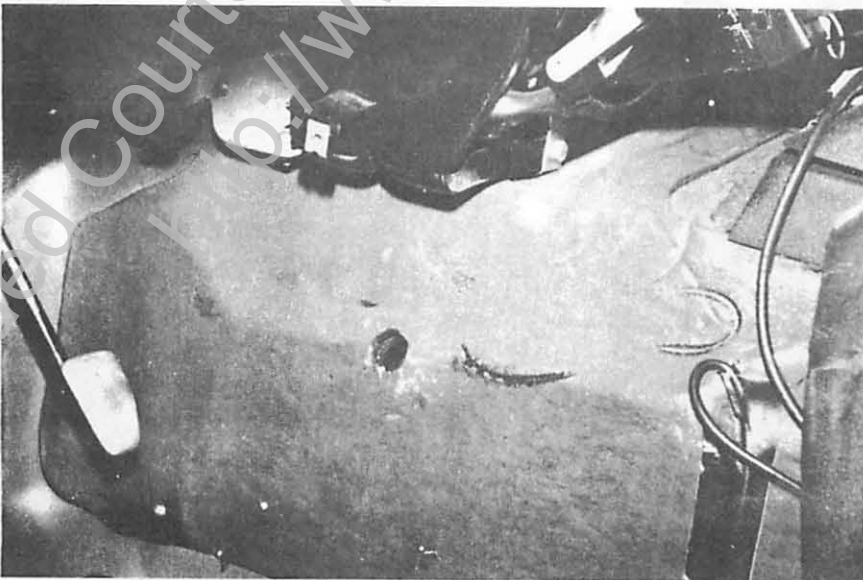


PHOTO # 2

PHOTO # 5

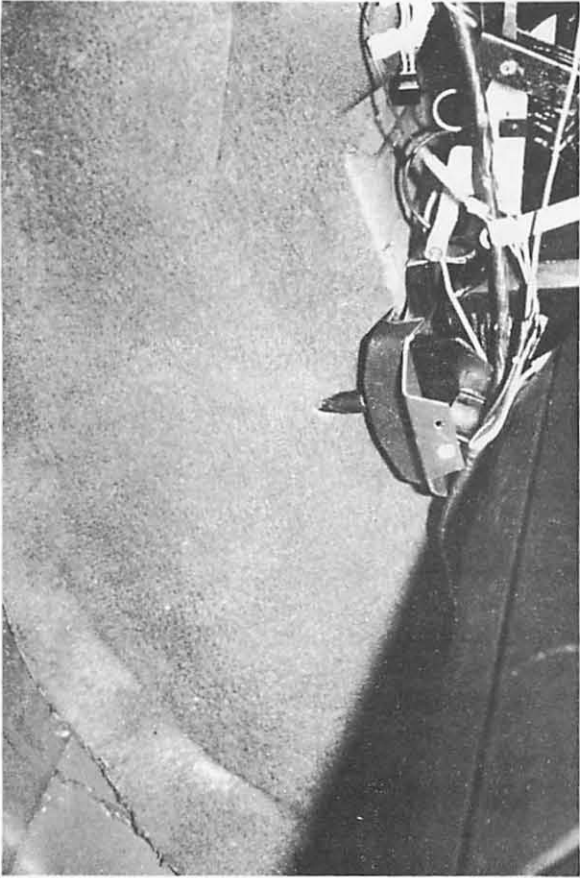


PHOTO # 3



PHOTO # 6



PHOTO # 4

